

## Implementing the **AD5940** and **AD8233** in a Full Bioelectric System

by Micheál Lambe

### INTRODUCTION

The **AD5940** is a high precision, ultra low power, analog front end (AFE) system designed to excite and measure the current, voltage, or impedance response of a sensor.

The **AD5940** features two high precision measurement loops. An ultra low power, sub 1 kHz loop and a high speed, sub 200 kHz loop allow the **AD5940** to precisely measure the impedance of a sensor.

This application note details how to set up the **AD5940** and the **AD8233** in a full bioelectric system that can perform electrodermal activity (EDA), body impedance analysis (BIA), and electrocardiogram (ECG) measurements through the same set of electrodes.

The hardware used contains the **AD5940** evaluation kit; which includes the **EVAL-ADICUP3029** Arm® based Arduino form factor microcontroller; the **EVAL-AD5940BIOZ** evaluation board; and the **AD5940 Z** test board shown in Figure 1.

### EVALUATION KIT STACK PHOTOGRAPH



Figure 1.

16807-001

## TABLE OF CONTENTS

Introduction .....	1	ECG Solution Using the AD5940 and the AD8233.....	10
Evaluation Kit Stack Photograph.....	1	Taking ECG Measurements .....	11
Revision History .....	2	4-Wire BIA .....	13
Evaluation Kit.....	3	4-Wire BIA Measurement Theory .....	13
Evaluation Kit Contents.....	3	4-Wire BIA Solution Using the AD5940.....	13
Measurement System Overview .....	4	Calculating Discrete Components for BIA.....	13
AD5940 Overview.....	4	Taking BIA Measurements.....	15
AD5940 Bioelectric System.....	4	EDA .....	17
2-Wire Bioimpedance .....	5	EDA Measurement Theory .....	17
Bioimpedance Measurement Theory .....	5	EDA Solution Using the AD5940.....	17
Bioimpedance Solution Using the AD5940 .....	5	Calculating Discrete Components for EDA .....	17
Calculations.....	6	Minimizing Power Consumption for Always On Application.....	19
Taking 2-Wire Bioimpedance Measurements .....	7	Taking EDA Measurements .....	19
ECG .....	10		
ECG Measurement Theory.....	10		

## REVISION HISTORY

3/2019—Revision 0: Initial Version

## EVALUATION KIT

### EVALUATION KIT CONTENTS

The [AD5940](#) evaluation kit includes the following:

- [EVAL-ADICUP3029](#)
- EVAL-AD5940BIOZ
- AD5940 Z test board
- ECG cable
- MicroUSB to USB cable

#### **EVAL-ADICUP3029**

The [EVAL-ADICUP3029](#) is the main motherboard for the evaluation kit. This board contains the on-board [ADuCM3029](#) microcontroller. The [ADuCM3029](#) is a leading edge Analog Devices, Inc., Arm Cortex M3 devices and is used to communicate to the [AD5940](#) via the serial peripheral interface (SPI).

#### **EVAL-AD5940BIOZ**

The EVAL-AD5940BIOZ board contains the [AD5940](#) and the [AD8233](#) chip used for ECG measurements. The EVAL-AD5940BIOZ is an Arduino Uno form factor board that plugs down onto the [EVAL-ADICUP3029](#). This board contains the necessary discrete components required for ECG, EDA, and BIA measurements, including isolation capacitors and current limiting resistors. This board also features an interface to connect measurement cables and the AD5940 Z test board, which models skin and body impedance. For more information on the EVAL-AD5940BIOZ board, refer to the [AD5940 User Guide wiki page](#).

#### **AD5940 Z Test Board**

The AD5940 Z test board contains a network of resistors, capacitors, and switches designed specifically for testing and verifying measurements. The AD5940 Z test board can model a range of body and skin impedances and plug into the EVAL-AD5940BIOZ board via the USB connector. For more information on the AD5940 Z test board, refer to the [AD5940 User Guide wiki page](#).

#### **ECG Cables**

The ECG cables supplied with the evaluation kit are provided as a means of connecting the hardware to a human body simulator for ECG, BIA, and EDA measurements. Never connect the [AD5940](#) evaluation board to the human body. Table 1 details the name and color mapping for the supplied cables.

**Table 1. Electrode Name and Color Mapping**

Electrode Name	Color
F+	Red
S+	Green
S-	Blue
F-	Black

## MEASUREMENT SYSTEM OVERVIEW

### AD5940 OVERVIEW

The [AD5940](#) data acquisition loop consists of a low bandwidth loop, a high bandwidth loop, a high precision analog-to-digital converter (ADC), and a programmable switch matrix.

The low bandwidth loop consists of a low power, dual-output digital-to-analog converter (DAC) that generates the bias voltage for the low power transimpedance amplifier (TIA) ( $V_{ZERO}$ ) and the bias voltage for the potentiostat amplifier ( $V_{BIAS}$ ).

The low bandwidth loop is used for low bandwidth signals where the frequency of the excitation signal is sub 200 Hz, such as EDA measurements.

The high bandwidth loop consists of a high speed DAC that is designed to generate a high frequency, ac excitation signal when making impedance measurements, and a high speed TIA designed to convert high bandwidth current signals up to 200 kHz into voltages measured by the ADC.

The high bandwidth loop is used for body impedance measurements where the excitation frequency is in the 50 kHz range.

The switch matrix is a series of programmable switches that allows the connection of external pins to the high speed DAC excitation amplifier and to the high speed TIA inverting input.

The switch matrix provides an interface to connect an external calibration resistor to the measurement system, as well as flexibility for connecting electrodes.

### AD5940 BIOELECTRIC SYSTEM

This application note describes how the [AD5940](#) can be used in a software configurable bioelectric system with the [AD8233](#). Through software, the system is capable of measuring BIA, EDA, or ECG on the same set of electrodes.

## 2-WIRE BIOIMPEDANCE

### BIOIMPEDANCE MEASUREMENT THEORY

The AD5940 can take 2-wire bioimpedance measurements for general-purpose impedance measurements on the body or can measure internal body tissues.

2-wire bioimpedance is a voltammetry measurement. To measure an unknown impedance ( $Z_{\text{UNKNOWN}}$ ), an ac excitation signal is applied across the unknown impedance. The voltage of the excitation signal is measured. Then, the current flow through the unknown impedance is measured. The current is converted to a voltage to be measured by the ADC via the TIA. A discrete Fourier transform (DFT) is performed on the ADC data for the current and voltage values. Using the real and imaginary parts, the magnitude is calculated to give the unknown impedance voltage ( $V_{Z_{\text{UNKNOWN}}}$ ) and unknown impedance current ( $I_{Z_{\text{UNKNOWN}}}$ ).

Use the following equation to calculate the unknown impedance magnitude of the sensor:

$$Z_{\text{UNKNOWN}} = \frac{V_{Z_{\text{UNKNOWN}}\text{MAG}}}{I_{Z_{\text{UNKNOWN}}\text{MAG}}} \times R_{\text{TIA}}$$

where:

$V_{Z_{\text{UNKNOWN}}\text{MAG}}$  is the magnitude of the unknown impedance voltage.

$I_{Z_{\text{UNKNOWN}}\text{MAG}}$  is the magnitude of the unknown impedance current.

$R_{\text{TIA}}$  is the value of the high speed TIA gain resistor in  $\Omega$ .

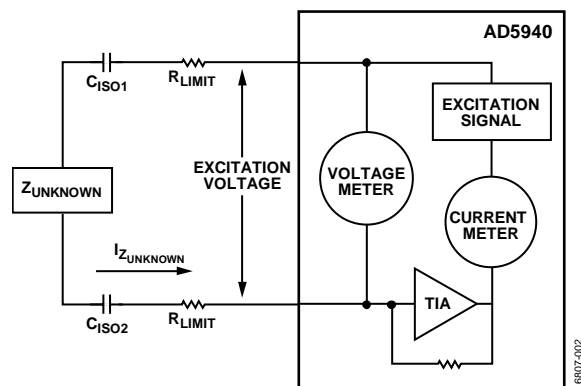


Figure 2. 2-Wire Bioimpedance Measurement Diagram

A bioimpedance measurement must conform to the IEC 60601 standard, which sets guidelines for the maximum allowable current that can enter the human body. The resistor limits ( $R_{\text{LIMIT}}$ ) the current.  $C_{\text{ISO}x}$  are the isolation capacitors that guarantee that no dc current enters the body. Guidelines for selecting the correct values can be found in the Calculations section.

### BIOIMPEDANCE SOLUTION USING THE AD5940

This section describes the blocks of the AD5940 used to perform 2-wire bioimpedance measurements. As outlined in the Bioimpedance Measurement Theory section, a 2-wire bioimpedance measurement requires an ac voltage source, a voltage measurement channel, and a current measurement channel.

For 2-wire bioimpedance measurement, the impedance under test can be connected between the CE0 pin and SE0, DE0, or AINx. For the purposes of this application note,  $Z_{\text{UNKNOWN}}$  is connected between CE0 and AIN1.

#### Excitation Signal

The AD5940 uses its waveform generator, high speed DAC, and excitation amplifier to generate high frequency excitation signals. The frequency is programmable from dc up to 200 kHz. The signal is applied to the sensor through the CE0 pin, as shown in Figure 3. The signal amplitude is programmable up to  $\pm 607$  mV.

#### Measuring Voltage

The voltage of the excitation signal is measured as the voltage is applied to the sensor. The positive input to the ADC is the P node, which connects to CE0 via the switch matrix as shown in Figure 3. The negative input to the ADC is the N node, which connects to the negative input of the high speed TIA. Using the DFT hardware accelerator, a DFT is performed on the ADC data where the real and imaginary parts are calculated and stored in the data first-in, first-out (FIFO).

#### Measuring $Z_{\text{UNKNOWN}}$ Current

To measure the  $Z_{\text{UNKNOWN}}$  current, the same excitation signal is applied to the sensor. The high speed TIA converts the current to a voltage to be read by the ADC via the gain resistor,  $R_{\text{TIA}}$ . Similarly, a DFT is performed on the ADC results, and the real and imaginary parts are stored in the data FIFO to be read by the host microcontroller.

#### Calculating $Z_{\text{UNKNOWN}}$

The AD5940 uses the sequencer to store commands. A host microcontroller (in this case, the EVAL-ADICUP3029) writes the required commands to the sequencer. These commands set up the DAC, ADC, and TIA for measurements. The sequencer executes the commands automatically, independent of the microcontroller. The voltage measurement is performed first. An interrupt is generated when the data FIFO is full. The microcontroller then reads the FIFO and stores the real and imaginary DFT results. The ADC mux is then configured to connect the high speed TIA output to the ADC to measure current. The sequence is rerun and the AD5940 generates an interrupt when the data FIFO is full, which alerts the host controller to read the data.

Use the following equations to determine  $Z_{UNKNOWN}$ :

$$|V_{MAG}| = \sqrt{r^2 + i^2}$$

$$|I_{Z_{UNKNOWN} MAG}| = \sqrt{r^2 + i^2}$$

$$|Z_{UNKNOWN}| = \frac{|V_{MAG}|}{|I_{Z_{UNKNOWN} MAG}|} \times R_{TIA}$$

where:

$V_{MAG}$  is the magnitude of the voltage across the sensor.

$r$  and  $i$  are the real and imaginary components from the current and voltage DFT measurements.

## CALCULATIONS

To optimize the AD5940 for 2-wire bioimpedance measurements, calculate the  $R_{LIMIT}$  value, add isolation capacitors ( $R_{TIA}$ ), and calculate the precision resistor ( $R_{CAL}$ ) value.

## Calculate $R_{LIMIT}$

To conform to IEC 60601 standards, limit the amount of ac current entering the human body. The maximum allowable ac current at is 500  $\mu A$  at 50 kHz and is 600  $\mu A$  at 60 kHz. When calculating the  $R_{LIMIT}$  resistor value, the maximum output voltage from the AD5940 is 1.2 V p-p (0.4243 V rms). Set the maximum allowable ac current to 80% of maximum, or 400  $\mu A$  rms. The following equation is the result of these values:

$$R_{LIMIT} = \frac{0.4243 \text{ V rms}}{400 \mu A \text{ rms}} = 1060.66$$

As such, a 1 k $\Omega$   $R_{LIMIT}$  is selected and is connected to the CE0 pin on the AD5940. This calculation ignores  $C_{ISOx}$  because of its small size.

## Isolation Capacitors

To conform to IEC 60601 standards, a 10  $\mu A$  maximum dc current is allowed to enter the human body. In this application, the dc current is guaranteed to be zero due to the addition of isolation capacitors. A value of 0.47  $\mu F$  is selected for the isolation capacitors because 0.47  $\mu F$  is a sufficiently large capacitance that is also available in small packages suitable for wearable electronics.  $C_{ISO1}$ , the isolation capacitor on CE0, is modified to 15 nF so the capacitor is suitable for EDA and BIA measurements. See the EDA section for details on calculation.

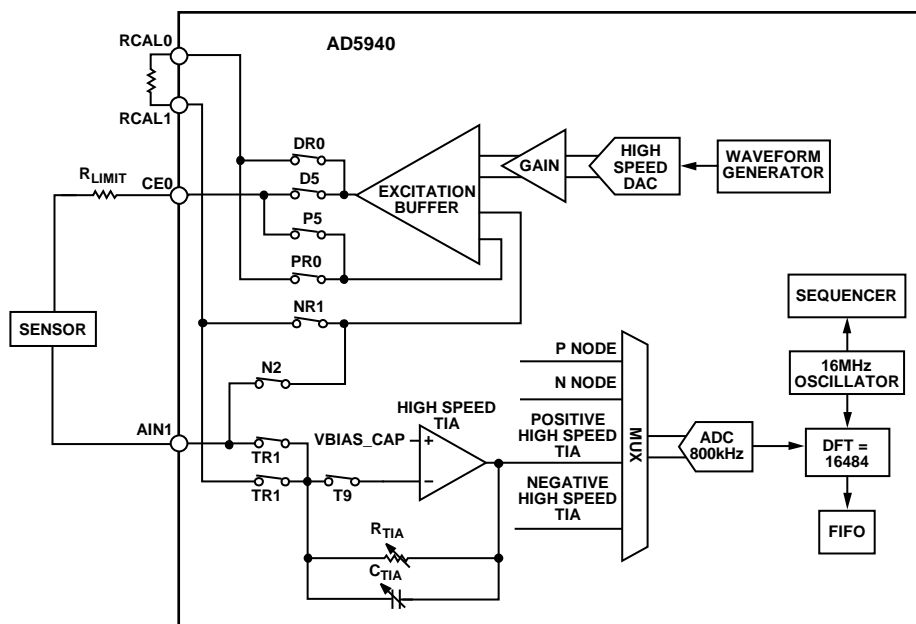


Figure 3. 2-Wire Bioimpedance Block Diagram

### Calculating $R_{TIA}$

To calculate  $R_{TIA}$ , the gain resistor for the high speed TIA, first calculate the minimum impedance and maximum current of the high speed TIA. In the following equation,  $R_{ACCESS1\_MIN}$  and  $R_{ACCESS2\_MIN}$  represent resistances in leads connecting the sensor and are assumed 0  $\Omega$ . Solving the equation gives a  $Z_{MIN} = 1.2 \text{ k}\Omega$ .

$$Z_{MIN} = \sqrt{r^2 + i^2} = \sqrt{(R_{LIMIT} + R_{ACCESS1\_MIN} + Z_{UNKNOWN\_MIN} + R_{ACCESS2\_MIN})^2 + (XC_{ISO1\_MIN} + XC_{ISO2\_MIN})^2}$$

where:

$Z_{MIN}$  is the minimum impedance.

$Z_{UNKNOWN\_MIN}$  is the minimum unknown impedance. Assumed to be 100  $\Omega$  in this equation.

$XC_{ISO1\_MIN}$  and  $XC_{ISO2\_MIN}$  are 67.73  $\Omega$  at 50 kHz.

The maximum output voltage from the high speed DAC is 600 mV peak. Calculate the maximum current ( $I_{MAX}$ ) into the TIA as follows:

$$I_{MAX} = 600 \text{ mV} / Z_{MIN} = 500 \text{ }\mu\text{A}$$

where  $Z_{MIN}$  is the minimum impedance.

The peak voltage allowed at the TIA output is 900 mV peak when the ADC programmable gain amplifier (PGA) gain is 1 or 1.5. As such,

$$R_{TIA} = 900 \text{ mV peak} / 500 \text{ }\mu\text{A peak} = 1.8 \text{ k}\Omega.$$

There is no 1.8 k $\Omega$   $R_{TIA}$  option on the [AD5940](#). Therefore, the 1 k $\Omega$  option was selected.

### Selecting $R_{CAL}$

$R_{CAL}$  is a precision resistor used in conjunction with the high speed DAC and excitation amplifier to generate accurate currents.  $R_{CAL}$  calibrates the high speed TIA gain resistor. Optimally, select an  $R_{CAL}$  value close to that of  $R_{TIA}$ . In this case,  $R_{CAL}$  must be 1 k $\Omega$ . To guarantee accuracy, the resistor must have a 0.1% tolerance.

### Calculating $Z_{UNKNOWN}$

The [AD5940](#) uses the sequencer to store commands. A host microcontroller writes the required commands into command memory, and the [AD5940](#) executes the commands automatically. The first measurement taken is the voltage measurement. It is only necessary to measure the voltage once because the result is stored. The sequencer then runs the measurement sequence which applies the excitation voltage and measures the response current performing a DFT on the data. The real and imaginary parts are stored in the FIFO. The sequencer can be configured to run periodically using the sleep and wakeup timer.

The host microcontroller reads the data FIFO to get the real and imaginary results for the current measurement. Using these values, the following equations determine the voltage measurement magnitude and voltage measurement phase:

$$\text{Voltage Measurement Magnitude} = \sqrt{r^2 + i^2}$$

$$\text{Voltage Measurement Phase} = \tan^{-1} \frac{-li}{r}$$

To calculate the impedance, use Ohm's law by dividing the voltage magnitude by the current magnitude. Convert the current measurement value into a voltage using  $R_{TIA}$ . This gain must be taken into account. Therefore, the equation to determine the unknown impedance is as follows:

$$|Z_{UNKNOWN}| = \frac{\text{Voltage Magnitude}}{\text{Current Magnitude}} \times R_{TIA}$$

## TAKING 2-WIRE BIOIMPEDANCE MEASUREMENTS

### Hardware Setup

The [EVAL-ADICUP3029](#), EVAL-AD5940BIOZ, and the AD5940 Z test board are required to perform 2-wire bioimpedance measurements. Stack the boards as shown in Figure 1.

On the AD5940 Z test board, there are five switch banks, S1 to S5. Bank S2 and Bank S4 simulate contact and lead impedances. S1 simulates bioimpedance. Note that S3 and S5 are not applicable to 2-wire bioimpedance measurements. To test measurement accuracy, set all switches on S2 and S4 to the on position, which sets the contact and lead impedance to zero. Toggle Switch 7 on Bank S1 to set the unknown impedance value to 2 k $\Omega$ , as shown in Figure 4.

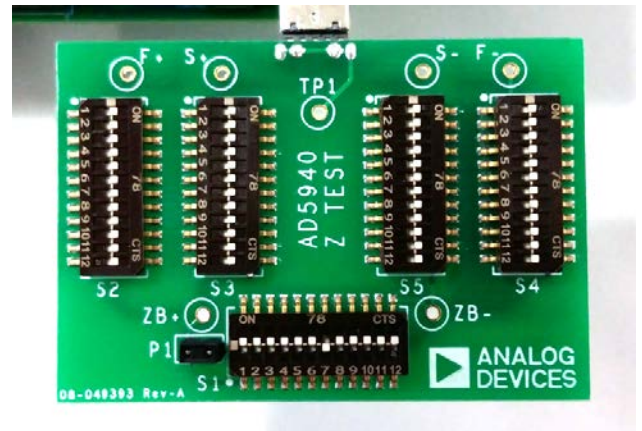


Figure 4. Impedance Test Board

### Firmware Setup

The [AD5940](#) software development kit has a dedicated 2-wire bioimpedance measurement example. To run the BIA measurements on the evaluation hardware, the user can use the Analog Devices SensorPal graphical user interface (GUI) tool (see the [AD5940](#)) or the IAR Embedded Workbench firmware example.



For quick prototyping, use the SensorPal tool. SensorPal provides a number of configurable parameters to define the measurement, as well as a quick graphing mechanism.

Alternatively, navigate to the **Examples** folder in the software development kit and select **AD5940\_BIOZ-2WIRE > ADICUP3029 > ADICUP3029.eww**. Open the **ADICUP3029.eww** file to open the project workspace in **IAR Embedded Workbench**.

To run the project, take the following steps:

1. Compile and build the project.
2. Start the debugger to begin code execution.
3. Open a terminal program such as RealTerm and configure the baud rate to 230400.

4. Select the communications port (COM) to which the **EVAL-ADICUP3029** is connected.

The measurement results are streamed over a universal asynchronous receiver transmitter (UART) and can be saved to a file for analysis.

To modify the default application parameters, use the **AD5940BIOZStructInit(void)** function in the **AD5940Main.c** file. The **AppBIOZCfg\_Type** data structure contains the configurable parameters for the application. For more details on the firmware, refer to the **AD5940\_Library\_and\_examples.chm** file located in the **doc** folder in the software development kit.

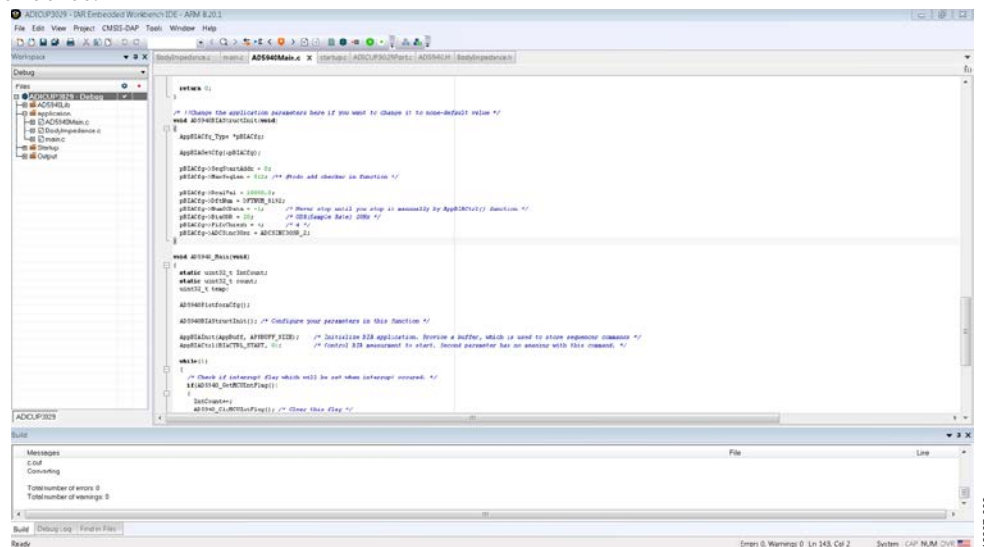


Figure 5. BIA Project in IAR

```

Freq:10000.00 RzMagn: 4161.961914 Ohm , RzPhase: -14.760194 Lf
Freq:10000.00 RzMagn: 4162.443359 Ohm , RzPhase: -14.762573 Lf
Freq:10000.00 RzMagn: 4162.443359 Ohm , RzPhase: -14.762573 Lf
Freq:10000.00 RzMagn: 4162.289063 Ohm , RzPhase: -14.758065 Lf
Freq:10000.00 RzMagn: 4161.961914 Ohm , RzPhase: -14.760194 Lf
Freq:10000.00 RzMagn: 4162.116211 Ohm , RzPhase: -14.764697 Lf
Freq:10000.00 RzMagn: 4162.443359 Ohm , RzPhase: -14.762573 Lf
Freq:10000.00 RzMagn: 4162.443359 Ohm , RzPhase: -14.762573 Lf

```

Figure 6. Measurement Results Displayed on the Terminal



### Measurement Results

The measurement results displayed on the terminal are shown in Figure 6. The magnitude is approximately 4162  $\Omega$  because the 2-wire bioimpedance measurement measures the impedance under test, the contact impedance, the current limiting resistors, and the isolation capacitors.

For Figure 7,

$$RzMag = R_{LIMIT1} + XC_{ISO1} + R_{EC1} + R1 \parallel R2 + XC_{ISO1} + R_{EC2} + XC_{ISO2} + R_{LIMIT2}$$

where:

$RzMag$  is the magnitude, or  $R1 \parallel R2 + C1$ .

$R_{LIMIT1}$  is a current limiting resistor to comply with IEC 60601.

$XC_{ISO1}$  is the reactance of  $C_{ISO1}$ .

$R_{EC1}$  is the contact impedance.

$R1$  is used to model bioimpedance.

$R2$  is used to model bioimpedance.

$R_{EC2}$  is the contact impedance.

$XC_{ISO2}$  is the reactance of  $C_{ISO2}$ .

$R_{LIMIT2}$  is a current limiting resistor to comply with IEC 60601.

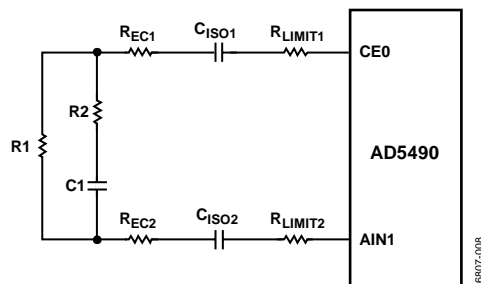


Figure 7. Circuit with Limiting Resistor and Isolation Capacitors

The **Impedance Profiling\_2wireIEC.xls** workbook provides equations for calculating expected results, taking into account the limiting resistors, isolation capacitors, and contact impedances.

On the EVAL-AD5940BIOZ evaluation board,  $R_{LIMIT1}$  and  $R_{LIMIT2}$  are both 1 k $\Omega$ ,  $C_{ISO1}$  is 15 nF, and  $C_{ISO2}$  is 470 nF. Assume that  $R_{EC1}$  is 0. By entering these values into the workbook (as in Figure 8), the theoretical values match closely with the measured values. The small error is the result of the tolerances of the components.

User Input	Value	Default on Bio-Electric
Frequency	10000	
C_ISO1	1.50E-08	1.50E-08
R_Limit	1.00E+03	1.00E+03
R_EC1	0	0
R1	2.00E+03	
R2	1.00E+10	
C1	1.00E+04	
R_EC2	1000	0
C_ISO2	4.70E-07	4.70E-07
	<b>Magnitude</b>	<b>Phase</b>
ZTOTAL =	4147.142801	-0.267179495
ZTOTAL =	4147.142801	-15.30825742

Figure 8. Impedance Profiling\_2wireIEC.xls Workbook

## ECG

### ECG MEASUREMENT THEORY

An ECG measures how the electrical activity of the heart changes over time as action potentials propagate throughout the heart during each cardiac cycle. An ECG does not directly measure the cellular depolarization and repolarization within the heart but rather the relative, cumulative magnitude of populations of cells eliciting changes in their membrane potentials at a given point in time. An ECG shows electrical differences across the heart when depolarization and repolarization of these atrial and ventricular cells occur.

Typically, the ECG is performed by placing two electrodes directly on the skin and reading the potential difference between the electrodes. This method is possible because these signals are transmitted throughout the body. The detected waveform features depend not only on the amount of cardiac tissue involved but also on the orientation of the electrodes with respect to the dipole in the heart. The ECG waveform looks slightly different when measured from different electrode positions, and typically, an ECG is obtained using a number of different electrode locations (such as limb leads or precordial) or configurations (such as unipolar, bipolar, and modified bipolar).

For the purposes of an ECG, consider the human body as a large volume conductor. The human body is filled with tissues surrounded by a conductive ionic fluid. The heart is suspended inside of that conductive medium. During the cardiac cycle, the heart contracts in response to action potentials moving along the chambers of the heart.

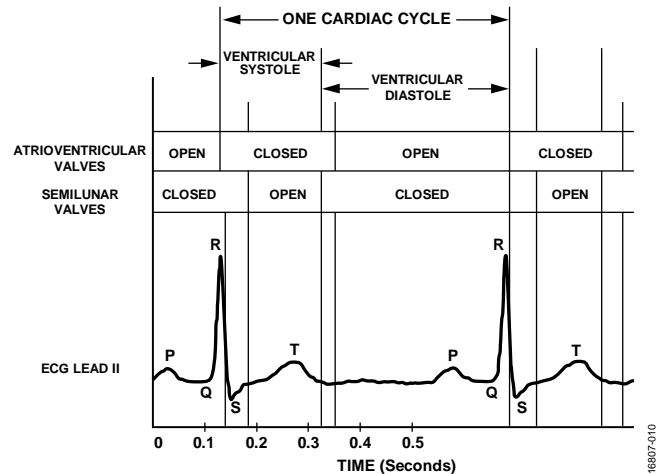


Figure 9. Typical ECG Waveform Compared to the Timing of Atrioventricular and Semilunar Valve Activity, Segments of the Cardiac Cycle During Which the Ventricles Are in Systole or Diastole

### ECG SOLUTION USING THE [AD5940](#) AND THE [AD8233](#)

This section describes how to use the [AD5940](#) and the [AD8233](#) to take ECG measurements. Connect the four measurement electrodes to the switch matrix of the [AD5940](#). Figure 10 highlights the signal chain for ECG measurements. Connect Electrode E4 to the right leg drive (RLD) input of the [AD8233](#) directly. Join E1 and E2 by closing internal switches on the [AD5940](#) switch matrix and connecting to the [AD8233](#) IN+ input via AFE2 by closing Switch P5 and Switch P6. Connect E3 to the [AD8233](#) via AIN0 and AFE3 by closing Internal Switch N7 and Internal Switch N1. Connect the output of the [AD8233](#) to Auxiliary Input AIN6 on the [AD5940](#).

The [AD5940](#) uses the sequencer to store measurement commands. A host microcontroller (in this case, the [ADuCM3029](#)) writes the required commands to the command memory. The sequencer runs the commands independent of the microcontroller. The initialization sequence is run first to configure the voltage references, the switch matrix, the ADC input source, and the ADC filters. The measurement sequence runs periodically with a user defined sample frequency to sample ECG data from the [AD8233](#) on the AIN6 pin.

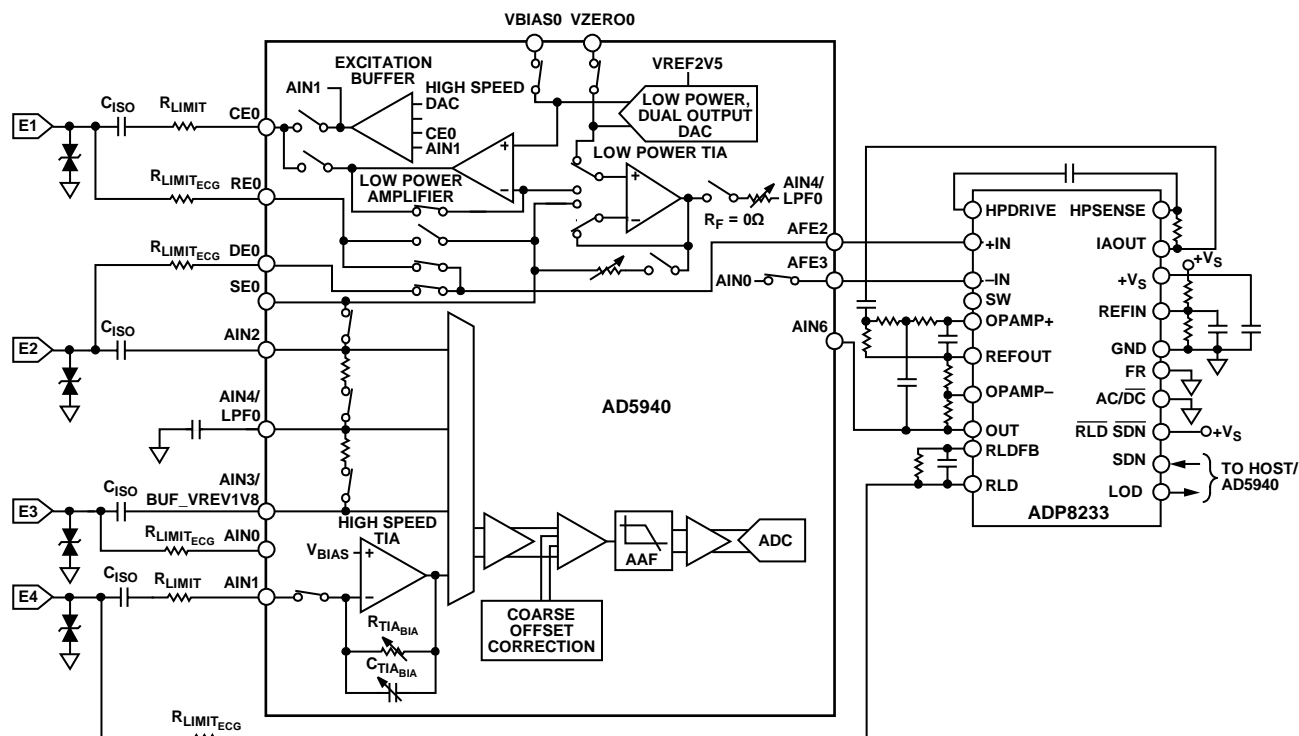


Figure 10. Signal Chain of the AD5940 and the AD8233

## TAKING ECG MEASUREMENTS

### Hardware Setup

The EVAL-AD5940BIOZ board included in the evaluation kit is ready to use (no hardware modifications are required). There are a number of surface-mount resistors and capacitors connected to AD8233 pins that set the system bandwidth. On the EVAL-AD5940BIOZ board, the components were selected for monitor bandwidth (0.34 Hz to 38 Hz) with a system gain of 296. To calculate the appropriate passive values for different cutoff frequencies, download the [AD8232\\_Filter\\_Design\\_Tool.zip](#) file found on the [AD8232 product page](#).

This sport bandwidth (7 Hz to 21 Hz) is intended for nonclinical applications such as a healthcare watch where ECG peaks are of interest. For applications where other aspects of the ECG waveform (such as the P wave, Q wave, S wave, or T wave) are of interest, the monitor bandwidth is required.

The AD5940 evaluation kit is equipped with custom ECG cables. These cables can connect to an ECG simulator for testing the hardware. Connect the RLD electrode to F-. Connect the right hand (RH) to F+ and S+. Connect the left hand (LH) to S-, as shown in Figure 11.

Never connect the EVAL-AD5940BIOZ evaluation board to the human body.

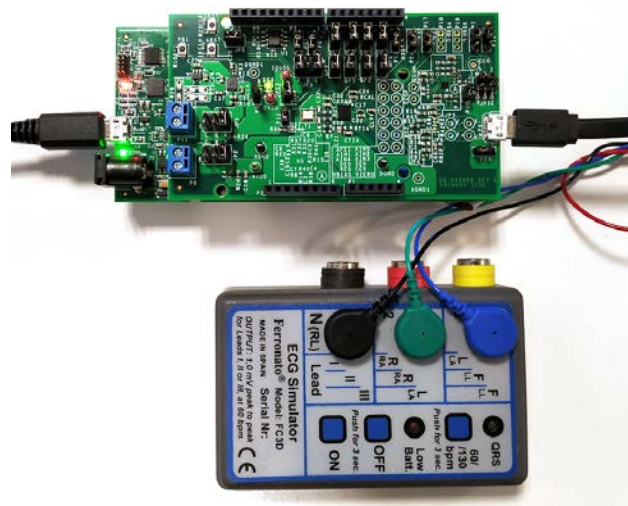


Figure 11. ECG Simulator Connected to Evaluation Board

### Firmware Setup

The AD5940 software development kit has a dedicated ECG measurement example. To run the ECG measurements on the evaluation hardware, the user can use the Analog Devices SensorPal GUI tool or the IAR Embedded Workbench firmware example.

For quick prototyping, use the SensorPal tool. SensorPal provides a number of configurable parameters to define the measurement, as well as a quick graphing mechanism.

Alternatively, navigate to the **Examples** folder in the software development kit and select **AD5940\_ECG > ADICUP3029 > ADICUP3029.eww**. Open the **ADICUP3029.eww** file to open the project workspace in **IAR Embedded Workbench**.

To compile and run the project, perform the following steps:

1. Compile and build the project (refer to the [AD5940 User Guide wiki page](#)).
2. Start the debugger to begin code execution.
3. Open a terminal program such as RealTerm and configure the baud rate to 230400.

4. Select the COM port to which the [EVAL-ADICUP3029](#) will be connected.

The measurement results are then streamed over a UART and can be saved to a file for analysis and to create graphs.

To modify the default application parameters, use the **AD5940ECGStructInit(void)** function. The **AppECGCfg\_Type** data structure contains the configurable parameters for the application. For more details on the firmware, refer to the **AD5940\_Library\_and\_examples.chm** file located in the **doc** folder in the software development kit.

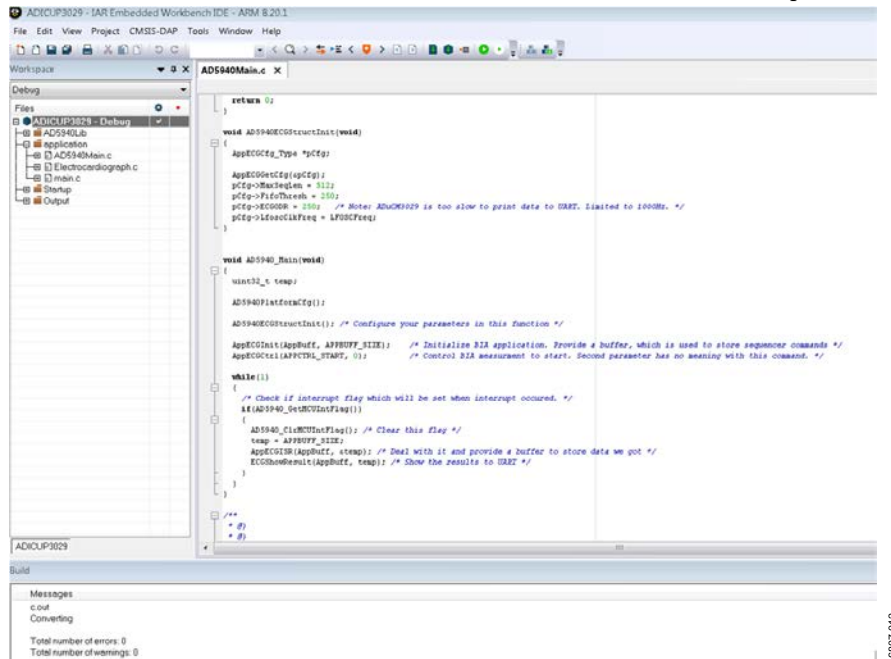


Figure 12. ECG Firmware in IAR Embedded Workbench

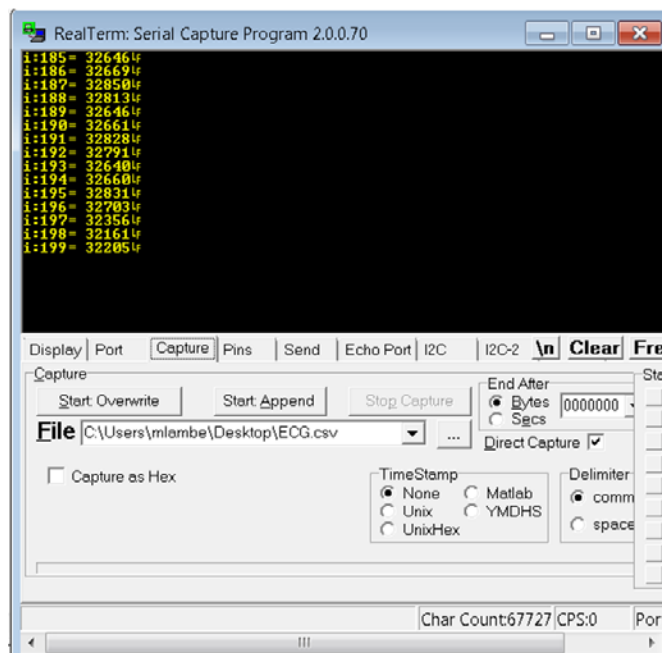


Figure 13. ECG ADC Results

## 4-WIRE BIA

### 4-WIRE BIA MEASUREMENT THEORY

The 4-wire BIA approach uses a high precision, ac voltage source to excite a sensor with a known ac voltage ( $V_{AC}$ ). Simultaneously, a common-mode voltage is applied across the sensor. To calculate the impedance, measure the current ( $I$ ) that flows from the unknown impedance and the voltage across the unknown impedance.

Calculate the impedance by using the following equation:

$$|Z| = V_{Z_{UNKNOWN}} / I$$

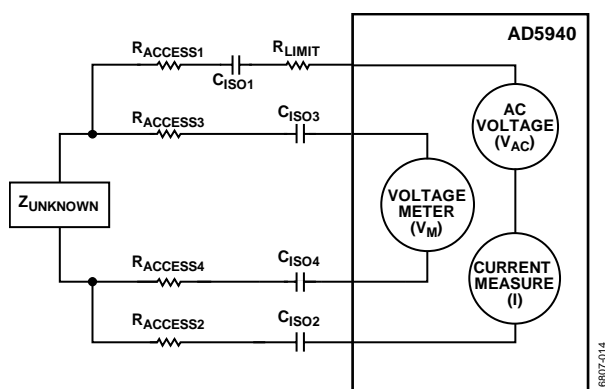


Figure 14. 4-Wire Bioimpedance Topology

In real-world applications, medical devices must conform to the IEC 60601 standard. This standard limits the amount of dc and ac voltage that can be applied to the human body. In Figure 14, there are discrete isolation capacitors ( $C_{ISO1}$ ,  $C_{ISO2}$ ,  $C_{ISO3}$ , and  $C_{ISO4}$ ) that ensure no dc voltage occurs across the body.  $R_{LIMIT}$  limits the current provided to the sensor to conform to the IEC 60601 standard.  $R_{ACCESSx}$  represents the resistances of the electrodes connecting to the unknown impedance.

### 4-WIRE BIA SOLUTION USING THE AD5940

As outlined in the 4-Wire BIA Measurement Theory section, a 4-wire bioimpedance solution requires a precision ac voltage source, a high precision current meter, and a precision differential voltage meter.

The Precision AC Voltage Source section, the High Precision Current Meter section, and the Precision Differential Voltage Meter section describe how these components are implemented on the AD5940.

#### Precision AC Voltage Source

The AD5940 uses a high speed DAC and waveform generator to generate the precision ac voltage. An internal differential sense configuration guarantees the accuracy of the voltage source by connecting CE0 and AIN1 back into the excitation buffer. Switch D5 in the programmable switch matrix connects the output of the excitation loop to the CE0 pin connected to the sensor. A sine wave generator generates a sine wave and outputs through the 12-bit, high speed DAC and excitation amplifier.

#### High Precision Current Meter

The AD5940 uses a high speed, high precision TIA for converting current from the sensor into a voltage measured by the ADC (see Figure 15). The TIA channel measures the response current and is precisely biased by the internal 1.11 V source. Tie the T channel and the N channel together using the switch matrix for accurate sense capability on the current measured. Figure 15 shows the connection between the sensor, the high speed TIA, and ADC of the AD5940. In Figure 15, HSTIA\_P is the mux signal from the high speed TIA into the ADC mux. The ADC converts the current measurement with an 800 kSPS speed. A DFT is performed on the data. The DFT is implemented on the AD5940. The number of DFT points is configurable up to 16,384. The AD5940 calculates the real and imaginary parts, and the host microcontroller calculates the unknown impedance of the sensor.

#### Precision Differential Voltage Meter

The AD5940 uses a low power DAC and a low power TIA to set the common-mode voltage between AIN2 and AIN3/BUF\_VREF1V8 through the AIN4/LPF0 pin. Connect the  $V_{BIAS}$  output of the low power DAC to the low power TIA positive input. The low power DAC is configured to output a precise 1.1 V. Connect the internal  $R_{FILTER}$  resistor at the low power TIA output. Connect the common-mode voltage ( $V_{CM}$ ) to AIN4/LPF0, which has a capacitor to GND that creates a low-pass filter.

### CALCULATING DISCRETE COMPONENTS FOR BIA

There are a number of discrete components needed in the system to guarantee safety and accuracy. This section describes the calculations used to select suitable isolation capacitors, gain resistors for the high speed TIA, and a current-limit resistor.

#### Current Limit Resistor

To conform to IEC 60601 standards, limit the amount of ac current entering the human body. The maximum allowable ac current at is 500  $\mu A$  at 50 kHz and is 600  $\mu A$  at 60 kHz. When calculating the  $R_{LIMIT}$  resistor value, the maximum output voltage from the AD5940 is 1.2 V p-p (0.4243 V rms). Set the maximum allowable ac current to 80% of maximum, or 400  $\mu A$  rms. The following equation is the result of these values:

$$R_{LIMIT} = \frac{0.4243 \text{ V rms}}{400 \mu A \text{ rms}} = 1060.66$$

As such, a 1 k $\Omega$   $R_{LIMIT}$  is selected and is connected to the CE0 pin on the AD5940. This calculation ignores  $C_{ISOx}$  because of its small size.

### Isolation Capacitors

To conform to IEC 60601 standards, a 10  $\mu\text{A}$  maximum dc current is allowed to enter the human body. In this application, the dc current is guaranteed to be zero due to the addition of isolation capacitors. A value of 0.47  $\mu\text{F}$  is selected for the isolation capacitors because 0.47  $\mu\text{F}$  is a sufficiently large capacitance that is also available in small packages suitable for wearable electronics.  $C_{ISO1}$ , the isolation capacitor on  $\text{CE0}$ , is modified to 15 nF so the capacitor is suitable for EDA and BIA measurements. See the EDA section for details on calculation.

### High Speed TIA Gain Resistor

To calculate  $R_{TIA}$ , the gain resistor for the high speed TIA, first calculate the minimum impedance and maximum current of the high speed TIA. In the following equation,  $R_{ACCESS1\_MIN}$  and  $R_{ACCESS2\_MIN}$  represent resistances in leads connecting the sensor and are assumed 0  $\Omega$ . Solving the equation gives a  $Z_{MIN} = 1.2 \text{ k}\Omega$ .

$$Z_{MIN} = \sqrt{r^2 + i^2}$$

$$= \sqrt{\left(R_{LIMIT} + R_{ACCESS1\_MIN} + Z_{UNKNOWN\_MIN} + R_{ACCESS2\_MIN}\right)^2 + \left(XC_{ISO1\_MIN} + XC_{ISO2\_MIN}\right)^2}$$

where:

$Z_{UNKNOWN\_MIN}$  is assumed to be 200  $\Omega$  in this equation.

$XC_{ISO1\_MIN}$  and  $XC_{ISO2\_MIN}$  are 67.73  $\Omega$  at 50 kHz.

The maximum voltage is 600 mV peak. The maximum current into TIA = 600 mV and into  $Z_{MIN} = 500 \mu\text{A}$ . The peak voltage at output of TIA = 900 mV peak, which is within the ADC range. As such,  $R_{TIA} = 900 \text{ mV peak (} 500 \mu\text{A peak)} = 1.8 \text{ k}\Omega$ . There is no 1.8 k $\Omega$ .  $R_{TIA}$  option on the AD5940. Therefore, the 1 k $\Omega$  option was selected.

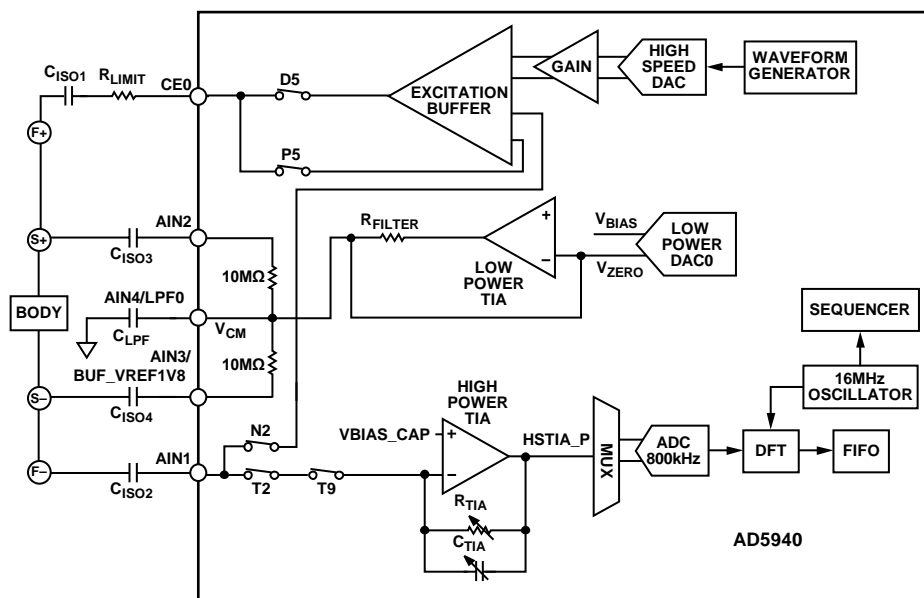


Figure 15. Bioimpedance Signal Path



### Calculating $Z_{UNKNOWN}$

The AD5940 uses the sequencer to store commands. A host microcontroller writes the required commands into command memory, and the AD5940 executes the commands automatically. The sequencer runs the commands and fills the data FIFO with the DFT real and imaginary results for both the voltage and current measurements (four data points in total).

The host microcontroller reads the data FIFO and uses the real and imaginary DFT results to calculate the unknown impedance. Calculate the impedance of the sensor by using the following equations:

$$\text{Voltage Measurement Magnitude} = \sqrt{r^2 + i^2}$$

$$\text{Voltage Measurement Phase} = \tan \frac{-li}{r}$$

To calculate the impedance, use Ohm's law by dividing the voltage magnitude by the current magnitude. Convert the current measurement value into a voltage using  $R_{TIA}$ . This gain must be taken into account. Therefore, the equation to determine the unknown impedance is as follows:

$$|Z_{UNKNOWN}| = \frac{\text{Voltage Magnitude}}{\text{Current Magnitude}} \times R_{TIA}$$

## TAKING BIA MEASUREMENTS

### Hardware Setup

The EVAL-ADICUP3029, EVAL-AD5940BIOZ, and the AD5940 Z test board are required to perform BIA measurements. Stack the boards as shown in Figure 1.

The jumpers on the EVAL-AD5940BIOZ board do not have any impact on BIA measurements and can remain in the default position.

On the AD5940 Z test board, there are five switch banks S1 to S5. S2, S3, S4, and S5 are used to simulate contact and lead impedances. S1 is used to simulate body impedance. To test measurement accuracy, set all switches on S2 to S4 to the on position, which sets the contact and lead impedance to zero. Open Switch 9 on Bank S1 to set the unknown impedance value to 2 k $\Omega$ , as shown in Figure 16.

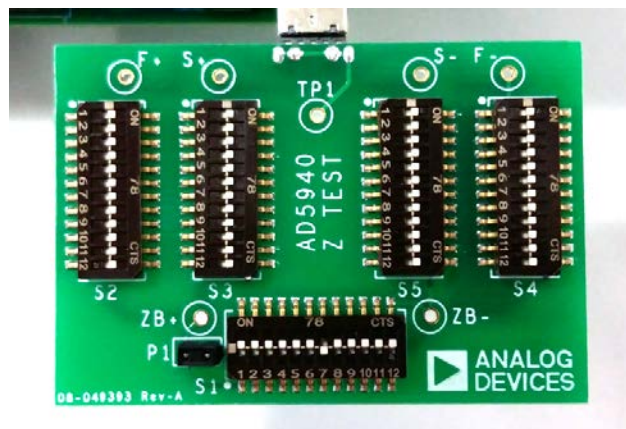


Figure 16. AD5940 Z Test Board Configuration

### Firmware Setup

The AD5940 software development kit has a dedicated BIA measurement example. To run the BIA measurements on the evaluation hardware, the user can use the Analog Devices SensorPal GUI tool or the IAR Embedded Workbench firmware example.

For quick prototyping, use the SensorPal tool. SensorPal provides a number of configurable parameters to define the measurement, as well as a quick graphing mechanism.

Alternatively, navigate to the Examples folder in the software development kit and select AD5940\_BIA > ADICUP3029 > ADICUP3029.eww. Open the ADICUP3029.eww file to open the project workspace in IAR Embedded Workbench.

To run the project, perform the following steps:

1. Compile and build the project.
2. Start the debugger to begin code execution.
3. Open a terminal program such as RealTerm and configure the baud rate to 230400.
4. Select the COM port to which the EVAL-ADICUP3029 will be connected.

The measurement results are streamed over a UART and can be saved to a file for analysis.

To modify the default application parameters, use the AD5940BIAStructInit(void) function. The AppBIACfg\_Type data structure contains the configurable parameters for the application. For more details on the firmware, refer to the AD5940\_Library\_and\_examples.chm file located in the doc folder in the software development kit.



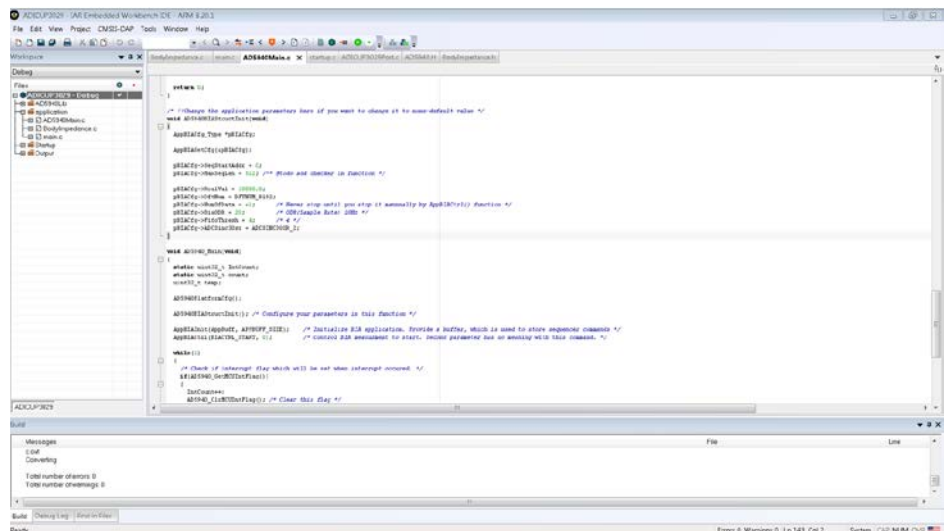


Figure 17. BIA Project in IAR

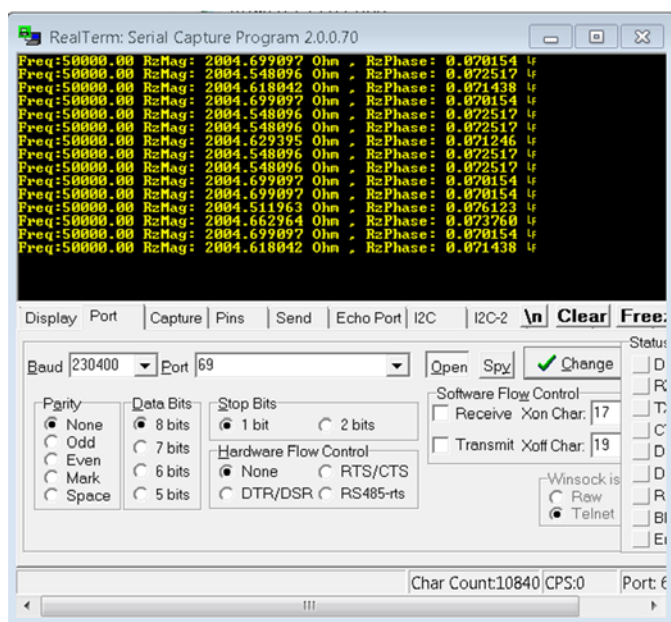


Figure 18. Measurement Results Displayed on the Terminal

## EDA

### EDA MEASUREMENT THEORY

EDA is a voltammetry measurement. To measure an unknown impedance, an ac excitation signal is applied across the unknown impedance. The voltage across the unknown impedance is measured. Then, the current flow through the unknown impedance is measured. The current is converted to a voltage to be measured by the ADC via the TIA. A DFT is performed on the ADC data for the current and voltage values. Using the real and imaginary parts, the magnitude is calculated to give  $V_{Z_{UNKNOWN}}$  and  $I_{Z_{UNKNOWN}}$ .

Use the following equation to calculate the unknown impedance magnitude of the sensor:

$$|Z_{UNKNOWN}| = \frac{|V_{Z_{UNKNOWN\_MAG}}|}{|I_{Z_{UNKNOWN\_MAG}}|} \times R_{TIA}$$

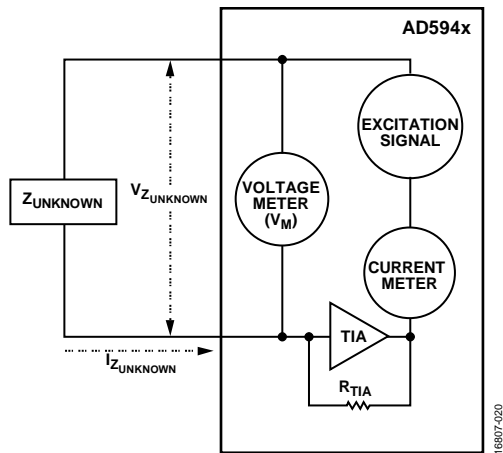


Figure 19. EDA Measurement Diagram

### EDA SOLUTION USING THE AD5940

This section describes the blocks of the AD5940 used to perform EDA impedance measurements. As outlined in the EDA Measurement Theory section, an EDA measurement requires an excitation voltage, a measurement of  $V_{Z_{UNKNOWN}}$ , and a measurement of the  $Z_{UNKNOWN}$  current.

#### Excitation Signal

The AD5940 uses its waveform generator and low power DAC to generate a low frequency sine wave ( $\approx 100$  Hz). The sine wave is applied to the sensor via the potentiostat amplifier connected to the CE0 pin (as shown in Figure 21).

#### Measuring Voltage

Connect the unknown impedance between the CE0 pin and the SE0 pin. Connect SE0 to the inverting input of the low power TIA. Connect a high precision reference to the TIA to maintain a common mode. To measure the voltage across  $Z_{UNKNOWN}$ , measure the voltage on CE0 and select the voltage on the CE0 pin ( $V_{CE0}$ ) as the input to the ADC. The measurement sequence then initiates, and a DFT is performed on the measured data.

Real and imaginary parts are stored in the data FIFO and are read by the host controller.

#### Measuring $Z_{UNKNOWN}$ Current

To measure the  $Z_{UNKNOWN}$  current, use the same setup used to measure voltage. However, in this case, the current is measured through the TIA. Select the low-pass filter output (LPTIA\_LPF0) as the input to the ADC. Rerun the measurement sequence, and a DFT is then performed on the ADC data. The real and imaginary parts are stored in the data FIFO and are read by the host controller.

#### Calculating $Z_{UNKNOWN}$

The AD5940 uses the sequencer to store commands. A host microcontroller (in this case, the EVAL-ADICUP3029) writes the required commands to the sequencer. These commands set up the DAC, ADC, and TIA for measurements. The sequencer executes the commands automatically, independent of the microcontroller. The voltage measurement is performed first. An interrupt is generated when the data FIFO is full. The microcontroller then reads the FIFO and stores the real and imaginary DFT results. The ADC mux is then configured to connect the low power TIA, low-pass filter output to the ADC to measure current. The sequence is rerun, and the AD5940 generates an interrupt when the data FIFO is full, which alerts the host controller to read the data.

Use the following equations to determine  $Z_{UNKNOWN}$ :

$$|V_{MAG}| = \sqrt{r^2 + i^2}$$

$$|I_{Z_{UNKNOWN\_MAG}}| = \sqrt{r^2 + i^2}$$

$$|Z_{UNKNOWN}| = \frac{|V_{MAG}|}{|I_{Z_{UNKNOWN\_MAG}}|} \times R_{TIA}$$

where  $r$  and  $i$  are the real and imaginary components from the current and voltage DFT measurements.

### CALCULATING DISCRETE COMPONENTS FOR EDA

There are a number of discrete components needed in the system to guarantee safety and accuracy. This section describes the calculations used to select a suitable current-limit resistor and isolation capacitors.

#### Calculating Limit Resistor

An 1 k $\Omega$   $R_{LIMIT}$  is used for BIA measurement. Because both measurements share the same electrode,  $R_{LIMIT}$  for EDA is also 1 k $\Omega$ .

#### Isolation Capacitors

$C_{ISO2}$ , the capacitor on the return path for EDA, is 0.47  $\mu$ F to match the BIA measurement. Select a suitable  $C_{ISO1}$  value to ensure that the ac current in the human body does not exceed 10  $\mu$ A in the worst case.

See Figure 20 for worst case conditions, where resistor body =  $0\ \Omega$  and capacitor body is a short circuit. Under these conditions, the largest current flows in the circuit. Use the following equations to calculate a suitable isolation for the EDA application.

$$I_{AC_{RMSLIMIT}} > \frac{V_{EXC_{RMS}}}{R_{LIMIT} + \left( \frac{1}{2 \times \pi \times f_{EXC} \times C_{ISO1}} + \frac{1}{2 \times \pi \times f_{EXC} \times C_{ISO2}} \right)}$$

$$V_{EXC_{RMS}} = 1.1 V_{PEAK} / \sqrt{2} = 0.777$$

where:

$I_{AC_{RMSLIMIT}}$  is the maximum allowed ac current in the human body.

$V_{EXC_{RMS}} = 1.1 V_{PEAK} / \sqrt{2}$ , where 1.1 V is the maximum range of the low power DAC.

$f_{EXC}$  is 100 Hz.

To find the maximum value for  $C_{ISO1}$ , redistribute the previous two equations, as follows:

$$C_{ISO1} < \frac{1}{2 \times \pi \times f_{EXC} \left( \sqrt{\frac{V_{EXC_{RMS}}}{I_{AC_{RMSLIMIT}}}}^2 - R_{LIMIT} - \frac{1}{2 \times \pi \times f_{EXC} \times C_{ISO2}} \right)}$$

Consider the worst case tolerances for the resistors and capacitors, as follows:

- 1% for  $R_{LIMIT}$
- 5% for  $C_{ISO2}$
- 20% for  $C_{ISO1}$
- 10% for  $f_{EXC}$

With these values, the equation to calculate  $C_{ISO1}$  is as follows:

$$C_{ISO1} < \frac{1}{1.2 \times 2 \times \pi \times 120 \left( \sqrt{\left( \frac{1.1 / \sqrt{2}}{10 \times 10^{-6}} \right)^2 - (1000 \times 0.99)^2} - \frac{1}{2 \times \pi \times 120 (470 \times 1.2)} \right)}$$

Where  $C_{ISO1} < 14\ \text{nF}$ .

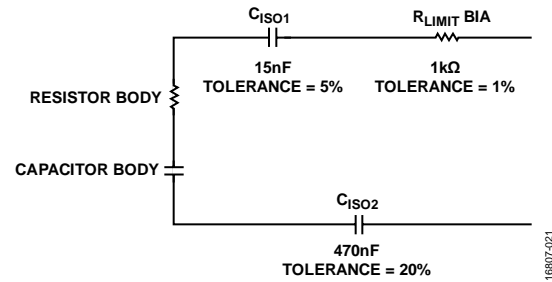


Figure 20. EDA Equivalent Circuit

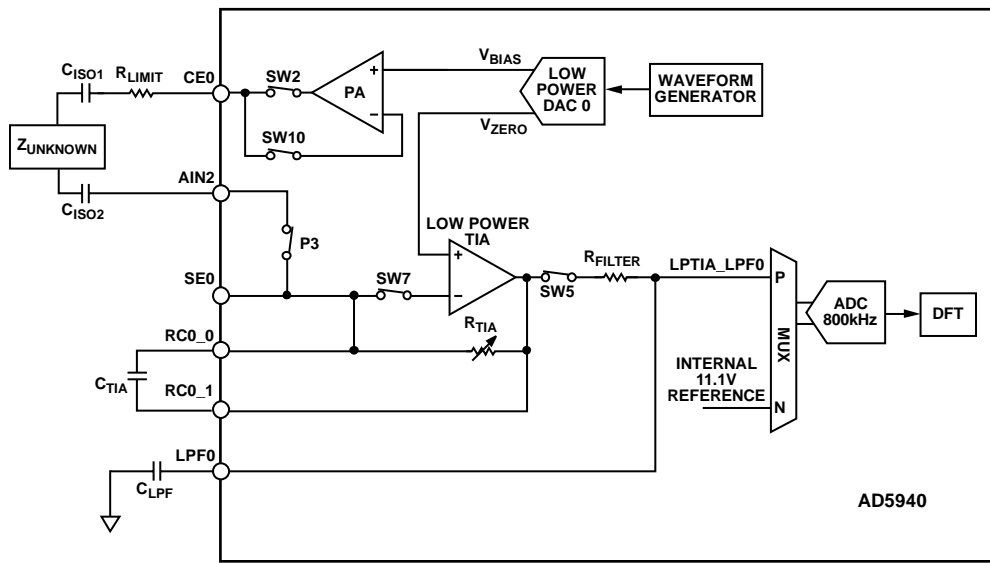


Figure 21. EDA Signal Path

## MINIMIZING POWER CONSUMPTION FOR ALWAYS ON APPLICATION

The EDA use case takes advantages of a key power saving feature of the [AD5940](#). The [AD5940](#) has a feature where the low power loop can run off the 32 kHz clock. After waking up from hibernate, the [AD5940](#) system clock is switched to the 32 kHz oscillator (LPMODECLKSEL Bit 0 = 0x1). The waveform generator, low power DAC, ADC, and DFT engine run on the 32 kHz oscillator. All data and DFT results are captured in this mode, minimizing the current consumption of the [AD5940](#). At the end of the measurement sequence, the [AD5940](#) switches back to the 16 MHz clock, disables all blocks, and returns to hibernate. With a sample rate of 4 Hz and a DFT number of 16, the total average current consumption of the [AD5940](#) is 66  $\mu$ A.

### Reading Back Data

When the [AD5940](#) is running on the 32 kHz oscillator, it is not possible to communicate with the device through the SPI interface. Ensure that the SPI transaction occurs at the correct time. Figure 22 shows the measurement timeline for an EDA measurement with a sample rate of 4 Hz. When the measurement is completed, the host microcontroller can read back the data in a 200 ms window. Ensure that this limit is not violated.

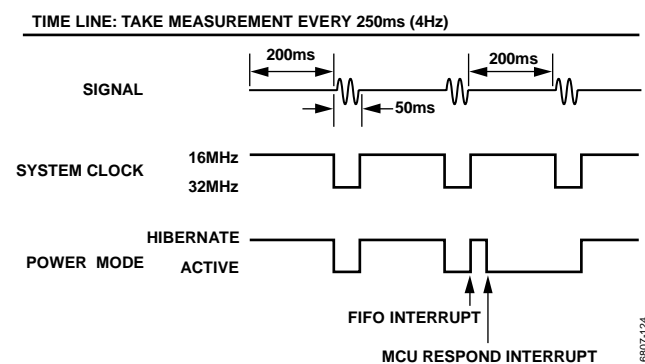


Figure 22. EDA Measurement Timeline

## TAKING EDA MEASUREMENTS

### Hardware Setup

The [EVAL-ADICUP3029](#), [EVAL-AD5940ARDZ](#), [EVAL-AD5940BIOZ](#), and [AD5940 Z test board](#) are required to perform EDA measurements.

The default jumper settings on the [EVAL-AD5940BIOZ](#) have no bearing on EDA measurement and can be left as is.

On the [AD5940 Z test board](#), Bank S2 and Bank S3 are used for EDA measurements. Remove the P1 jumper, and close S9.

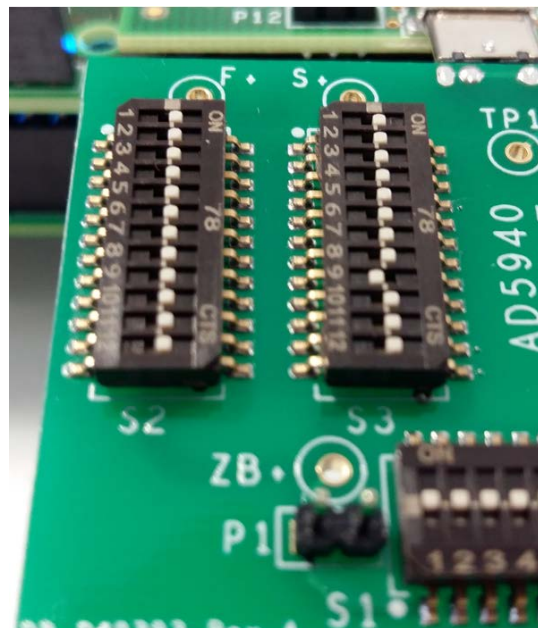


Figure 23. AD5940 Z Test Board Settings for EDA

### Firmware Setup

The [AD5940](#) software development kit has a dedicated EDA measurement example. To run EDA measurements on the evaluation hardware, the user can use the SensorPal GUI tool or the IAR Embedded Workbench firmware example.

For quick prototyping, use the SensorPal tool. SensorPal provides a number of configurable parameters to define the measurement, as well as a quick graphing mechanism.

Alternatively, navigate to the **Examples** folder in the software development kit and select **AD5940\_EDA > ADICUP3029 > ADICUP3029.eww**. Open the **ADICUP3029.eww** file to open the project workspace in **IAR Embedded Workbench**.

To run the project, perform the following steps:

1. Compile and build the project.
2. Start the debugger to begin code execution.
3. Open a terminal program such as RealTerm and configure the baud rate to 230400.
4. Select the COM port to which the [EVAL-ADICUP3029](#) is connected.

The measurement results are streamed over a UART and can be saved to a file for analysis.

To modify the default application parameters, use the **AD5940EDAStructInit(void)** function. The **AppEDACfg\_Type** data structure contains the configurable parameters for the application. For more details on the firmware, refer to the **AD5940\_Library\_and\_examples.chm** file located in the **doc** folder in the software development kit.



000000

The application described in this application note is specific to the [AD5940](#) and the [AD8233](#) for use with the [EVAL-ADICUP3029](#). In addition to the terms of use contained in the evaluation board user guides, it is understood and agreed to that the evaluation board or design must not be used for diagnostic purposes and must not be connected to a human being or animal. This evaluation board is provided for evaluation and development purposes only. It is not intended for use or as part of an end product. Any use of the evaluation board or design in such applications is at your own risk and you shall fully indemnify Analog Devices, Inc., its subsidiaries, employees, directors, officers, servants and agents for all liability and expenses arising from such unauthorized usage. You are solely responsible for compliance with all legal and regulatory requirements connected to such use.